 
GRCH-322

					D10. \(\text{\text{\$64}}\) PULLEY (\(\text{9213-023}\) [2PCS]	<u>ש</u>
						J 5
					D	, ,
					•	
	9		O	0		
)		D
	D10	D9	D8	D7	D1. $50X75$ NYLON BUSHING (9212-031) — — $\frac{1}{4}$ PCS	
(4	(
9	<u></u>				C3. 5/16" SPRING WASHER — — — — — — [4PCS]	C
D6	טט	DЗ	עע) [(I.D) WASHER	
!	d	7	3	7	C1. M10 (I.D) WASHER — — — — — — — [4PCS]	C
0	6	Ø	•	Ç	B2. M8 NYLON LOCK NUT — — — — — — [2PCS]	B
		9	>	3	B1. M12 NYLON LOCK NUT —————————[2PCS]	W
C4	C2 C3	C1	B2	B1	A4. M8x45 HEX HEAD BOLT ———————[2PCS]	<u> </u>
				•	A3. 5/16"X2 3/4" HEX HEAD BOLT — — — — [4PCS]	<u></u>
	9	9	G	R	M10x20 HEX HEAD BOLT — — — — [<u> </u>
•	74) C	Ž			
	A A	<u>></u>	δ <u>ν</u>	Δ1		>
	SHEET	TION	RA	ILLUST	GRUH-366 HARDWARE II	
				1 1	TIAJJIAJJ	**********




GRCH-322 PARTS ILLUSTRATION SHEET

F [1PCS] Left 9132-011 A [1PCS] C [1PCS] H [1PCS] Right 9132-012 D [1PCS] E [1PCS] B [1PCS] G [1PCS]

GRCH-322

THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK, YOU MUST FOLLOW THESE RULES:

- 1. Inspect equipment before each workout. Checke that all nuts, bolts, screws and pop pins are in place and fully tightened. Also, before use, check cables for signs of wear. Replace all worn parts immediately. Never use machine if any parts are damaged or missing. Failure to follow these rules may result in serious injury.
- 2. Keep clear of the cables and all moving parts when the machine is in use.
- 3. Always make sure all Snap Links are closed when doing any cable/pulley exercises.
- Exercise with care. Perform your exercises at a smooth moderate pace; never perform jerky or uncoordinated movements that may cause injury.
- It is recommended that you should workout with a training partner.
 Do not allow children or minors to play on or around this equipment.
- 7. If unsure of proper use of equipment, call your local Body-Solid
- instruction.

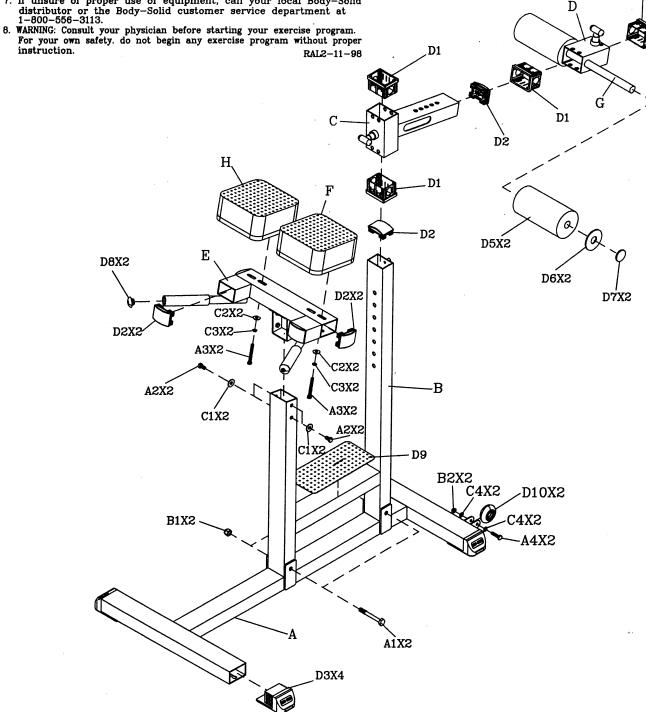

D1